

INSTALLATION GUIDE

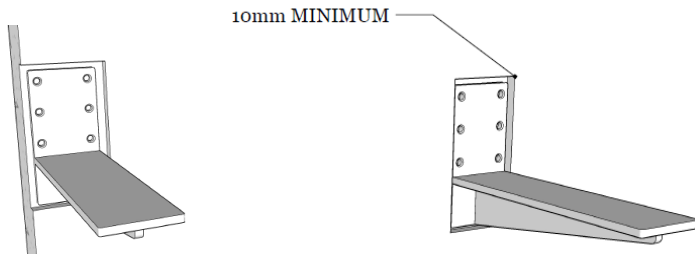


Fig.1 Brackets need to be recessed to a minimum of 10mm into wall.

Fig.2 Brackets are then screwed into wall using appropriate fixings (6mm diameter countersunk holes are provided).

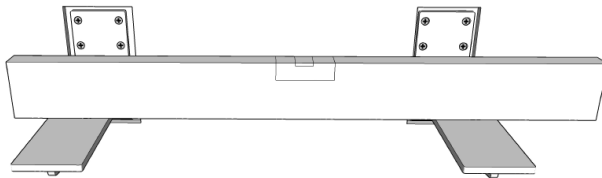
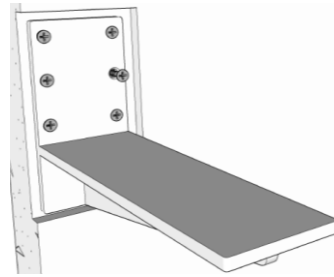


Fig.3 Check that your brackets are level before placing basin on top.

Fig.4 Brackets shown concealed by tiles.


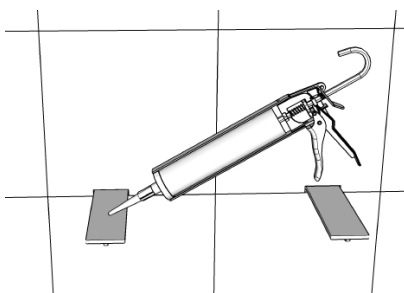


Fig.5 Apply a generous amount of bonding agent/adhesive such as Tec 7 to surface of both brackets

Fig.6 Carefully place basin on the brackets and allow to dry for 24 hours before use.

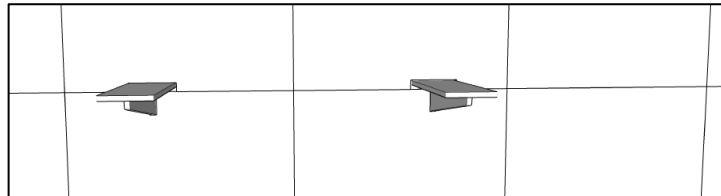